


Conexiones reusables para mangueras SAE 100 R1 y SAE 100 R2

Hembra giratoria rosca UNF asiento hembra JIC 37°


C1105 - C2105

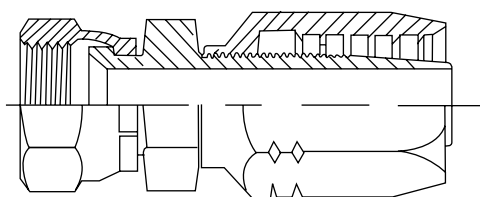

Nº CODIGO SAE 100 R1	Nº CODIGO SAE 100 R2	Manguera Ø Interno	TAMAÑO ROSCA
1105-03-04	2105-03-04	3/16"	7/16"-20
1105-04-04	2105-04-04	1/4"	7/16"-20
1105-04-05	2105-04-05	1/4"	1/2"-20
1105-04-06	2105-04-06	1/4"	9/16"-18
1105-05-06	2105-05-06	5/16"	9/16"-18
1105-06-06	2105-06-06	3/8"	9/16"-18
1105-06-08	2105-06-08	3/8"	3/4"-16
1105-08-08	2105-08-08	1/2"	3/4"-16
1105-08-10	2105-08-10	1/2"	7/8"-14
1105-10-12	2105-10-12	5/8"	1 1/16"-12
1105-12-12	2105-12-12	3/4"	1 1/16"-12
1105-12-14	2105-12-14	3/4"	1 3/16"-12
1105-16-16	2105-16-16	1"	1 5/16"-12
1105-20-20	2105-20-20	1 1/4"	1 5/8"-12
1105-24-24	2105-24-24	1 1/2"	1 7/8"-12
1105-32-32	2105-32-32	2"	2 1/2"-12

Hembra giratoria rosca BSP asiento hembra 37°

C1106 - C2106

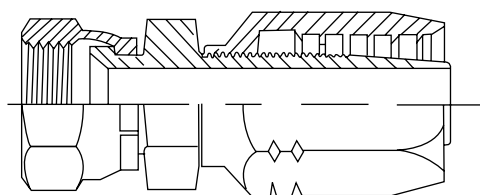

Nº CODIGO SAE 100 R1	Nº CODIGO SAE 100 R2	Manguera Ø Interno	TAMAÑO ROSCA
1106-03-02	2106-03-02	3/16"	1/8"-28
1106-03-04	2106-03-04	3/16"	1/4"-19
1106-04-02	2106-04-02	1/4"	1/8"-28
1106-04-04	2106-04-04	1/4"	1/4"-19
1106-05-06	2106-05-06	5/16"	3/8"-19
1106-06-06	2106-06-06	3/8"	3/8"-19
1106-06-08	2106-06-08	3/8"	1/2"-14
1106-08-08	2106-08-08	1/2"	1/2"-14
1106-10-10	2106-10-10	5/8"	5/8"-14
1106-10-12	2106-10-12	5/8"	3/4"-14
1106-12-12	2106-12-12	3/4"	3/4"-14
1106-16-16	2106-16-16	1"	1"-11
1106-20-20	2106-20-20	1 1/4"	1 1/4"-11
1106-24-24	2106-24-24	1 1/2"	1 1/2"-11
1106-32-32	2106-32-32	2"	2"-11

"Poberaj SA se reserva el derecho de modificar las características y medidas de sus productos sin previo aviso".